

LOYALTY
pet products

SANISPRAY PRO

The Ultimate Multi-Purpose Spray Gun

BY LOYALTY PET



USER'S MANUAL

SCHEMATIC DESIGN



POPULAR SCIENCE

Viruses are spread throughout the air. The SaniSpray Pro helps eliminate viruses and bacteria through blue infrared lighting in combination with disinfectant. Multi-purpose solutions can be used to eliminate bacteria and viruses both in the air and on surfaces for kennels, vet offices, grooming salons, animal shelters and much more through auto spray technology. This allows a vast area to be covered in a shorter time period with less force tension on your wrists and fingers.

BASIC PARAMETERS



Product name	: Sanispray Pro
Nozzle	: Dual-channel nozzle
Charging interface	: Type-C
Charging current	: 5V-2000mAh
Charging time	: 2-4h
Working time	: 120minutes
Number of air pumps	: Dual motor drive
Maximum pressure	: 280Kpa-350Kpa
Maximum flow	: 17L-20L/min
Jet distance	: 7ft-9ft
Atomized particles	: 1-15 μ m
Noise	: 260dB
Working temperature	: 5 $^{\circ}$ c ~ 45 $^{\circ}$ c

Notice:

- Please use the original charging cable to charge the device.
- Different product configuration, pressure and flow rate



Install water bottle

Slowly unscrew the empty container by turning it counter-clockwise slowly. Once container is off, fill up with solution of your choice, keeping notice of proper dilution instructions per manufacturer of solution. Return container to body and tighten slowly until tension is tight.

Auto Spray

In order to protect the safety of the motor and battery, the equipment adopts a soft start design, long press the switch Device can be turned on or off




1. To avoid the switch jam, please gently press the switch.
2. Press the switch for 2 seconds to start the device.
3. Press the switch for 2 seconds to turn off the device.
4. Single-motor-driven products can be adjusted for 1 time and 2 time by short pressing the switch when the machine is turned on.

WARNING:

1. It is strictly forbidden to immerse the whole machine in water or rinse with water voiding the warranty.
2. After spraying and disinfecting every day, you must spray with clean water for a few minutes to clean the pipeline period otherwise, it is easy to caused nozzle blockage or pressure drop.
3. Dirty water mixtures in the container will cause pressure reduction, blockage, or parts to malfunction. Use clean water / solutions only.
4. If charging port becomes wet, gun may not be able to be charged anymore - deeming it useless and void of warranty.

5. Store the sprayer at indoor temperature in winter.
6. In summer, store the sprayer in an environment that cannot be exposed to sunlight. for extended periods of time
7. This intended to be used on surfaces, kennels, buildings, tables, desks, chairs, etc - NOT ON LIVING ANIMALS / HUMANS.
8. Check the power of the product and ensure that there is no for eign matter in the container before each operation.
9. Avoid spraying plugged in devices and electrical outlets.
10. Do not pour hot or boiling liquid into container.

TROUBLESHOOTING

FAILURE PHENOMENON	CAUSE ANALYSIS	SOLUTION
Water leakage	Water bottle	Contact the dealer Change water bottle
Intermittent spray	The water bottle is not tightened	Tighten the water bottle
Poor spray effect	The water bottle is not tightened or the filter is clogged	Tighten the water bottle & check the nozzle & whether the filter is clogged
Switch button Unable to rebound+	The button switch is damaged	Contact the dealer
Can not boot, and the blue light flashes	Dead battery	Charge the battery in time
Can't charge	Check the charging cable and Whether the power supply is damaged.	Replace the power supply or charging cable please the original charging cable
Blue indicator light is on	 Normal work	
Red indicator light is on	 Charging works normally	
Green indicator light is on	 Charging is complete	

TROUBLESHOOTING

1. Please use the original charging cable for charging.
2. Please use a charger above 5V-2A for charging.

PRODUCT MAINTENANCE



- When this product has not been used for a long time, please charge the device every 6 months.
- After spray disinfection every day, you must spray with clean water for a few minutes to clean the pipeline memory
- The remaining disinfectant particles, otherwise, it is easy to cause the nozzle to block or reduce the pressure.
- After using this product, do not leave any residue or spray in the container. Please clean the bottle after use.
- When not in use, store the product in a dry, safe, and well-ventilated room
- Empty the spray in the bottle and pipe (emptying method: fill with clean water, spray 5 minutes away)
- Do not use this product in the rain or in a severely humid environment.
- Do not operate this product in an explosive environment, such as flammable liquids, gases, and dust.

WARNING

- It is forbidden to spray flammable liquids such as alcohol and kerosene, and it is forbidden to use special working fluids.
- It is forbidden to use a pressure water gun to spray when cleaning the product
- Handling, mixing, using and storing their chemicals in accordance with the recommendations of chemical manufacturers,
- The product should be protected from impact and falling during transportation.
- When spraying the appliance, keep a distance of more than 1 meter from the appliance.
- When operating this product. It may be dangerous to come into contact with certain chemicals.
- Please tell the product to be stored out of the reach of children.
- It is strictly forbidden for children to operate this product.
- Please turn off the product when not in use.
- Do not spray in the direction of people or animals.